

Using the Universal Hand Tool With Your Rug Doctor Mighty Pro® & Wide Track Is Easy!



Set Up

Prepare surfaces for cleaning by thoroughly vacuuming or brushing. When cleaning and drying cushions, first spread sheets or towels on the floor as a drying surface for the dampened cushions.

Disconnect the machine's large vacuum hose (ILLUS.1). Reconnect the top portion to the large vacuum hose of hand tool (ILLUS.2). Slide down the brass "Quick coupler" ring and pull out the small solution hose (ILLUS.3).

Slide down the ring again to insert the metal end of the hand tool solution hose (ILLUS.4). Release the brass ring to secure. Tug gently on the hose to make certain the connection is secure. Upholstery tool is now connected to machine (ILLUS.5).

Remove the white upper tank, mix Rug Doctor Upholstery Cleaner in a clean bucket according to label directions and pour into Lower tank.

Slip the tank back in place and seal the tank and clear dome securely by replacing the retaining wire. Plug in the power cord and position the machine.

Turn on the machine by pressing the "ON" switch for UPHOLSTERY/ HAND TOOL cleaning on the top of the machine.

WARNING: If the Rug Doctor machine ingests foam through the dome filter, damage to the carpet and vacuum motor could result.

Start Cleaning

Test upholstery for colorfastness by first cleaning a small, hidden area, then rubbing the test area with a white paper towel. If no color appears, continue cleaning.

Working at a slow, steady pace, begin cleaning by squeezing the hand tool lever as you pull the tool backwards over fabric (ILLUS.6). Overlap strokes slightly.

If foam builds up around the hand tool, pull slightly faster or vacuum excess solution by passing over area a second time without squeezing the lever on the hand tool. When cleaning is complete, switch the machine to "OFF" for the off position.

Disconnect both of the hoses from the machine. Holding the hose ends over a sink, squeeze the hand tool trigger until all liquid is drained.


To drain and clean the machine, refer to the Maintaining Your Rug Doctor Machine section. Reconnect the machine vacuum and solution hoses.

NOTE: For velvet upholstery, fluff up damp pile with a soft brush or towel to keep from matting.


(ILLUS.1)



(ILLUS.2)

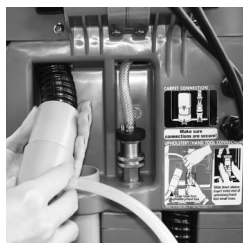

(ILLUS.3)

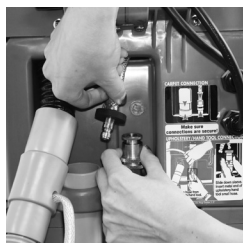


(ILLUS.4)



(ILLUS.5)



(ILLUS.6)

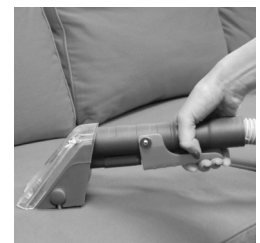

Using the Universal Hand Tool With Your Rug Doctor Mighty X3® Is Easy!



Set Up

Prepare surfaces for cleaning by thoroughly vacuuming or brushing. When cleaning and drying cushions, first spread sheets or towels on the floor as a drying surface for the dampened cushions.

Disconnect the machine's large vacuum hose (ILLUS.1). Reconnect the top portion to the large vacuum hose of hand tool (ILLUS.2). Slide up the brass "Quick coupler" ring and pull out the small solution hose (ILLUS.3).

Slide up the ring again to insert the metal end of the hand tool solution hose (ILLUS.4). Release the brass ring to secure. Tug gently on the hose to make certain the connection is secure. Upholstery tool is now connected to machine (ILLUS.5).

Remove the recovery tank, mix Rug Doctor Upholstery Cleaner in a clean bucket according to label directions and pour into Lower tank.

Slip the tank back in place and close the dome hood. Plug in the power cord and position the machine.

Turn on the machine by sliding the switch to the "Tool" position on the side of the handle.

WARNING: If the Rug Doctor machine ingests foam through the dome filter, damage to the carpet and vacuum motor could result.

Start Cleaning

Test upholstery for colorfastness by first cleaning a small, hidden area, then rubbing the test area with a white paper towel. If no color appears, continue cleaning.

Working at a slow, steady pace, begin cleaning by squeezing the hand tool lever as you pull the tool backwards over fabric (ILLUS.6). Overlap strokes slightly.

If foam builds up around the hand tool, pull slightly faster or vacuum excess solution by passing over area a second time without squeezing the lever on the hand tool. When cleaning is complete, switch the machine to "0" for the off position.

Disconnect both of the hoses from the machine. Holding the hose ends over a sink, squeeze the hand tool trigger until all liquid is drained.


To drain and clean the machine, refer to the Maintaining Your Rug Doctor Machine section. Reconnect the machine vacuum and solution hoses.

NOTE: For velvet upholstery, fluff up damp pile with a soft brush or towel to keep from matting.

(ILLUS.1)



(ILLUS.2)

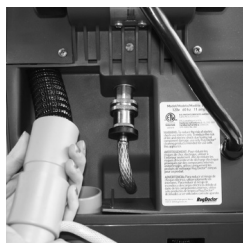

(ILLUS.3)



(ILLUS.4)



(ILLUS.5)



(ILLUS.6)

